


RT40 Infra Red Remote Control

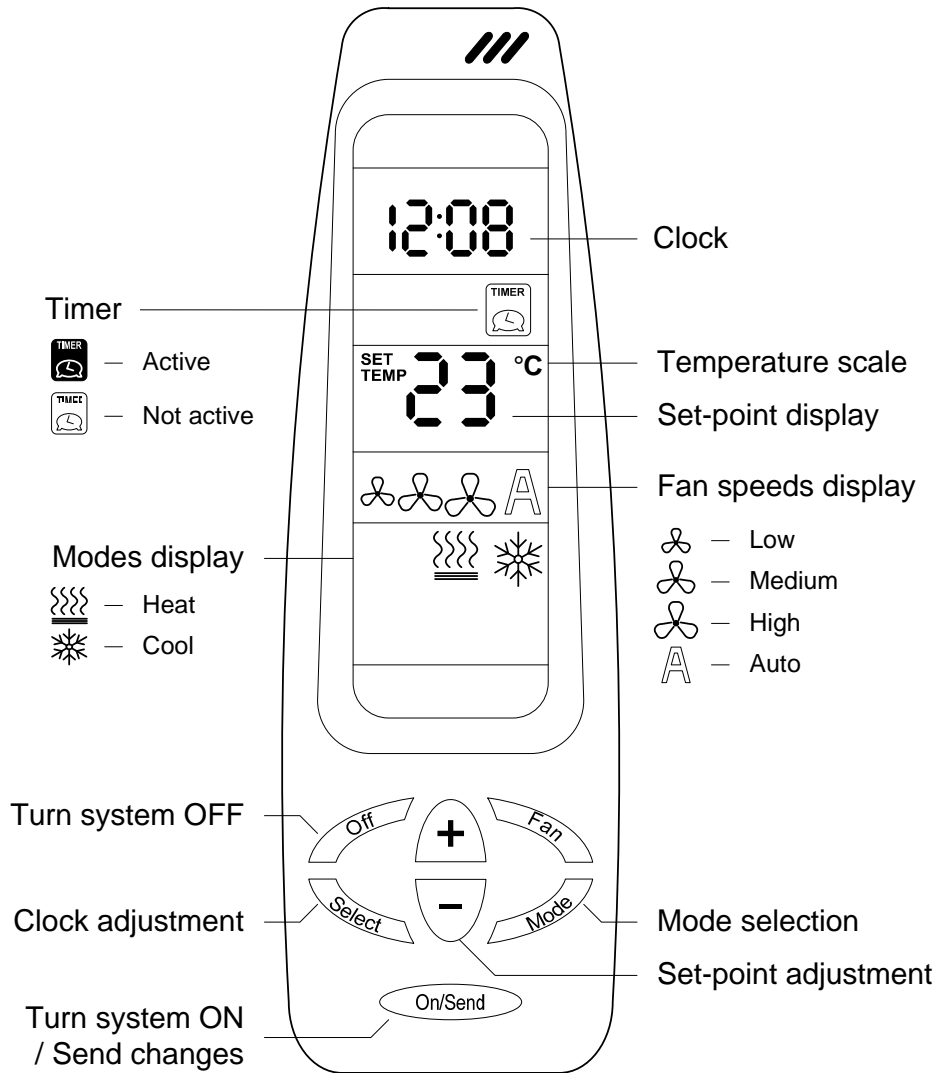

Timer and Real Time Clock and Day

Timer Start Time

- Press the [Select] button – “PROGRAM & START” will flash on display.
- Press the [+] button - the hours will flash.
- Adjust the hours using the [+] or [-] buttons.
- Press the [Select] button - the minutes will flash.
- Adjust the minutes using the [+] or [-] buttons.

Timer Stop Time

- Press the [Select] button again – “PROGRAM & STOP” will flash on display.
- Press the [+] button - the hours will flash.
- Adjust the hours using the [+] or [-] buttons.
- Press the [Select] button - the minutes will flash.
- Adjust the minutes using the [+] or [-] buttons.
- Press the [Select] button - the TIMER will blink
- Select TIMER ON (black icon) or OFF (white icon) using the [+] or [-] buttons.

Clock

- Press the [Select] button again – “CLOCK SET” will flash.
- Press the [+] or [-] buttons - the hours will flash.
- Adjust the hours using the [+] or [-] buttons.
- Press the [Select] again - minutes will flash.
- Adjust the minutes using the [+] or [-] buttons.
- Press the [Select] again to return to normal display.

- Press the “On/Send” button to send information to the thermostat.


Batteries Replacement

When the batteries are low, the display of the remote control will dim. If the batteries will not be replaced the display will turn off completely.

Batteries replacement:

- Pull the batteries cover down to reveal the batteries.
- Remove the old batteries.
- **Wait for 10 minutes before installing the new batteries.**
- Install two new AAA batteries – Pay attention to the polarity.
- Return the batteries cover to place.

Important: The remote control will not operate unless at least 10 minutes pass between removing the old batteries and installing the new ones.

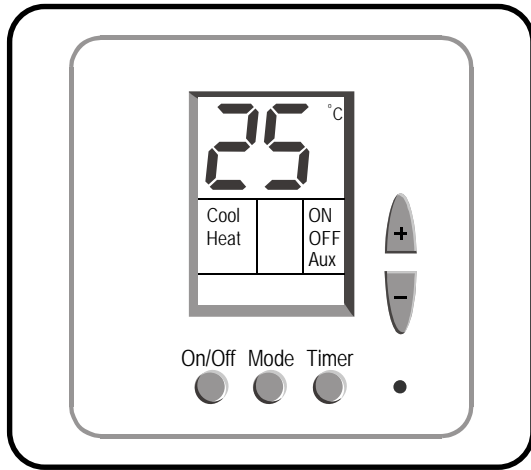

Owner's Manual

Turning the ETN40P1 ON or OFF

- Press the [On/Off] button to turn the ETN40P1 ON or OFF.

Note: This operation will not affect the ON or OFF status of the A/C unit.

Adjusting the set point temperature

- Press the [+] button – the set point temperature will appear on display.

- Use the [+] and [-] buttons to adjust the set point temperature.

Selecting system mode

- Press the [Mode] button to switch between Heating and Cooling modes.

Note: The actual mode is set by the A/C unit.

The mode set by ETN40P1 should be the same as the mode set by the A/C unit, in order to operate the damper properly.

Adjusting the On/Off timer

- Press the [Timer] button.

- Use the [+] and [-] buttons to select the number of hours until the thermostat turns ON or OFF (opposite to current position).

Note: The timer can also be set using the RT40 remote control unit (option).

When the timer is activated, "Aux" will appear on display.

In order to cancel the timer, change the hours to "0".

