


External return air sensor (OPTION)

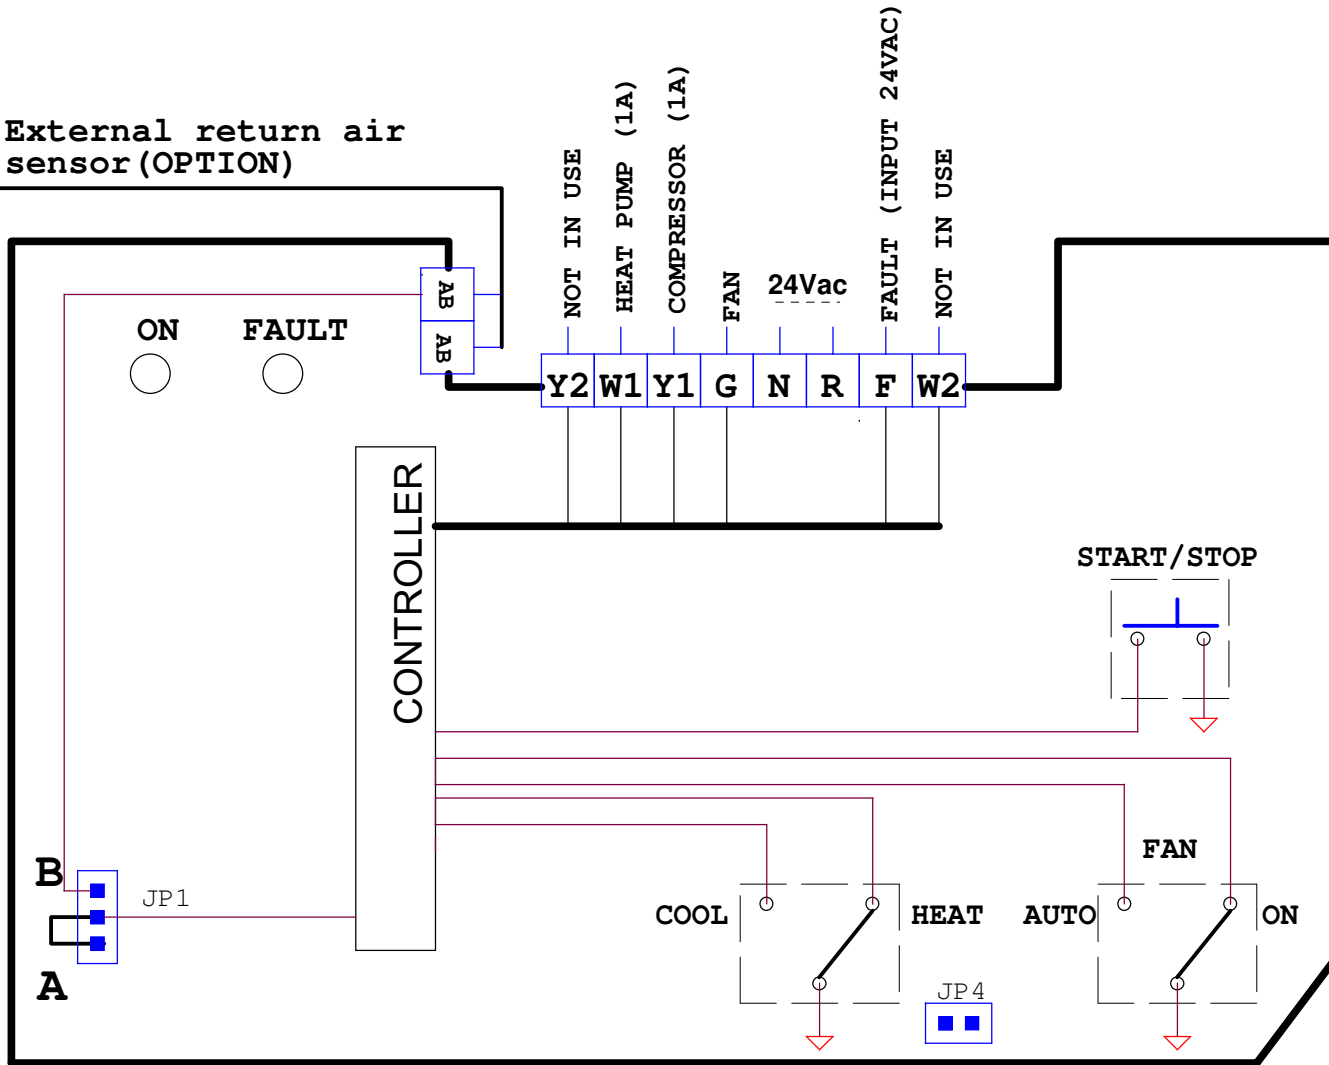

Jumper JP1 in place:
 A-Internal Air Sensor,
 B-External Air Sensor.

Jumper JP4 in place:
 Open-HP in COOL,
 Close-HP in HEAT.