


External return air sensor (OPTION)

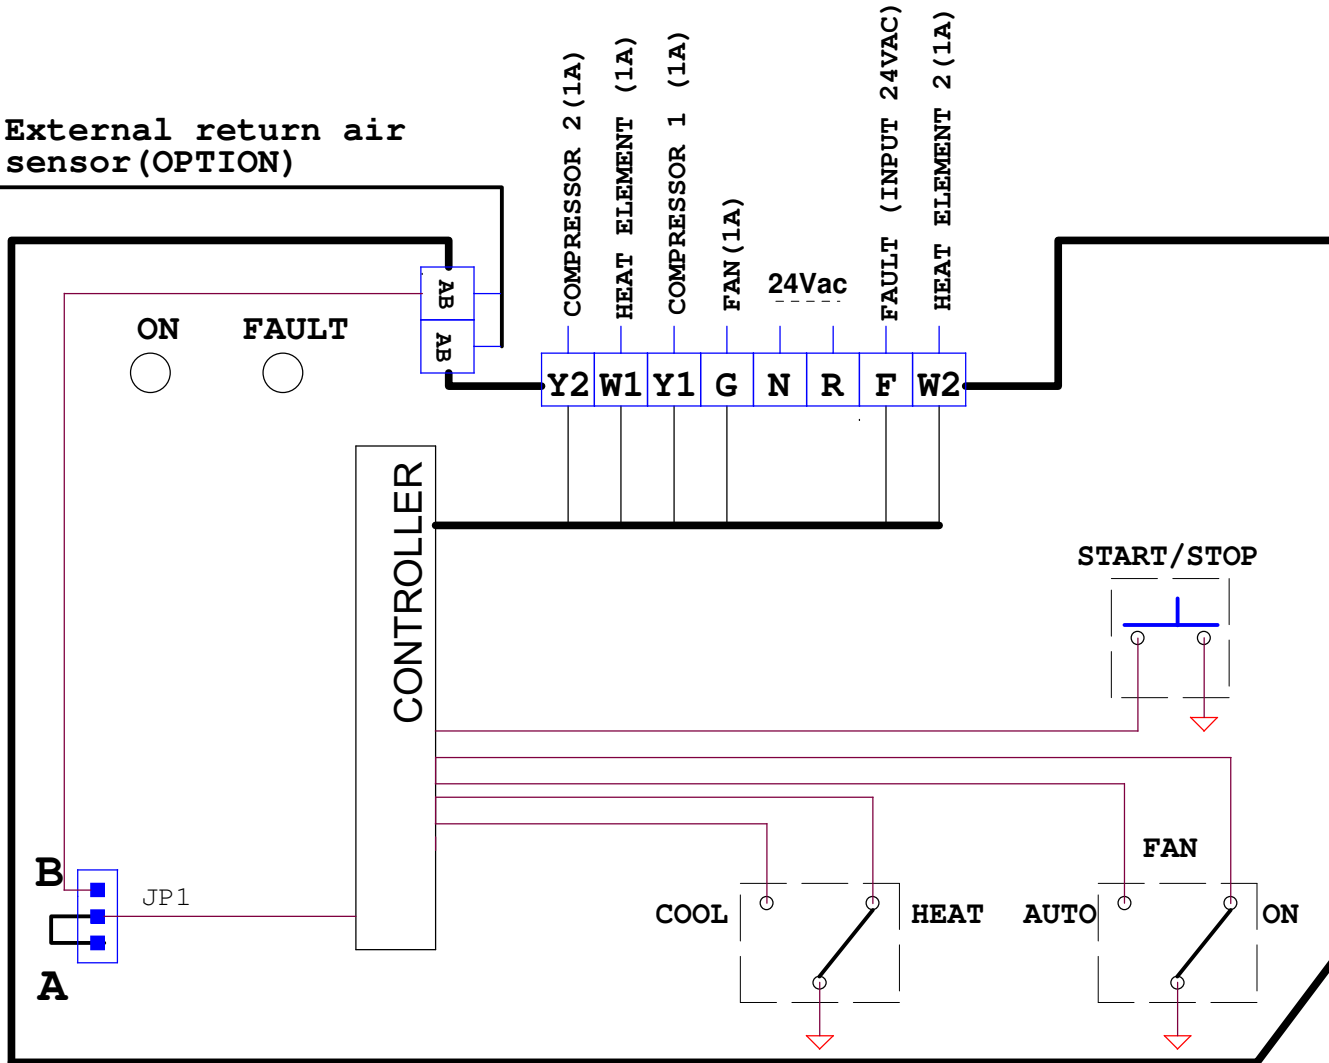

Jumper JP1 in place:  
 A-Internal Air Sensor,  
 B-External Air Sensor.